



AUTOMATE™

A DIVISION OF ROLLEASE ACMEDA


Quick Programming Guide



1. Pair shade to remote

Select channel
on controller.

Hold **P1** button
on motor head.

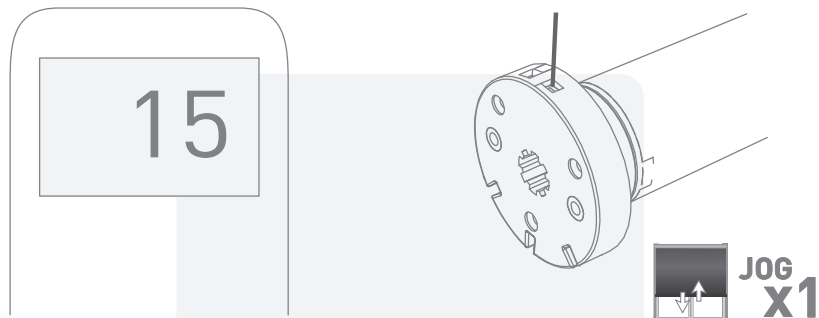

Release **P1** button
on motor head.

Hold **STOP**
on controller.



MOTOR RESPONSE



2.Change motor direction



To reverse shade direction,
hold both **UP** and **DOWN**
until the motor responds.

MOTOR RESPONSE



JOG
X1



BEEP
X1

3. Set top limit



To save upper limit,
hold both **UP** and **STOP**.



Set lower limit

To save lower limit,
hold both **DOWN** and **STOP**.

MOTOR RESPONSE



JOG
X2



BEEP
X3

4. Adjust lower limit



Hold both **DOWN** and **STOP** on controller.



Move shade to desired lowest position by pressing the **DOWN** arrow.



To save lower limit, hold both **DOWN** and **STOP**.

MOTOR RESPONSE



5. Adjust upper limit



Hold both **UP** and **STOP** on controller.



Move shade to desired upper position by pressing the **UP** arrow.




To save upper limit, hold both **UP** and **STOP**.

MOTOR RESPONSE



**Not required for setup*

6. Set/Delete a Favorite Position

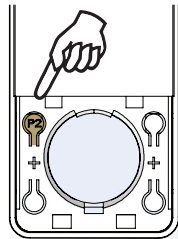

Press **P2** on controller.



Press **STOP** on controller.



Press **STOP** on controller.


MOTOR RESPONSE



**Not required for setup*

7. Create/Delete groups using P2


Press **P2** on controller **A**.

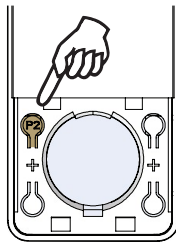

Press **P2** on controller **A**.



Press **P2** on controller **B**.

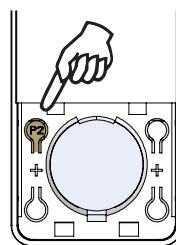


MOTOR RESPONSE



**Not required for setup*

8.Adjust Motor Speed

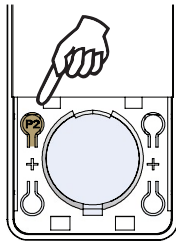

Press **P2** on controller.



Press **UP** on controller.




Press **UP** on controller.

MOTOR RESPONSE




**Not required for setup*

9.Lock Remote

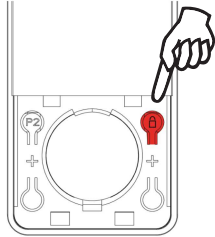

To switch modes, hold right **LOCK** button for **5 seconds**.

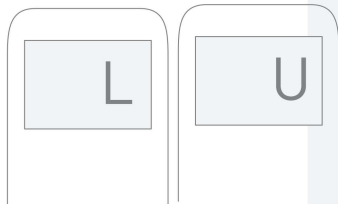

For 15 CH

LCD displays "L" when locked,
LCD displays "U" when unlocked.



For 1 CH

LED solid on when locked
LED blinking when unlocked


10.Hide Channels

Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels. Inactive channels will not be visible when scrolling through the CH selection.



Press **"STOP"** to lock in

11. Setting Modes

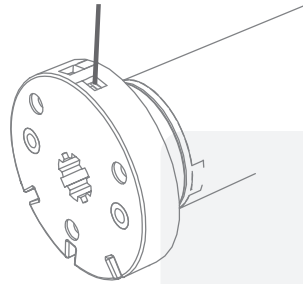

The **P1 Button** is utilized to administer motor configurations as described below.

Hold **P1 button** on motor head

ACTIVE PAIRING MODE



SLEEP MODE



REVERSE DIRECTION



RESET TO FACTORY SETTINGS




**Not required for setup*

12. Step Mode

Default motor mode is Roller after initial Limits have been set, use following steps to change to Step Mode.

Hold **UP & DOWN**
on controller

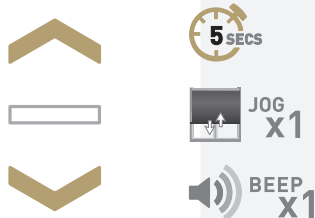


Press **STOP**
on controller



If motor is in Step Mode, use following steps to change to Roller Mode


Hold **UP & DOWN**
on controller

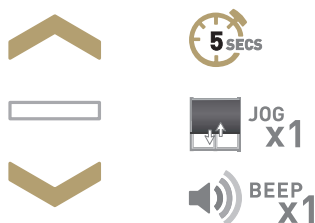

Press **STOP**
on controller



**Not required for setup*

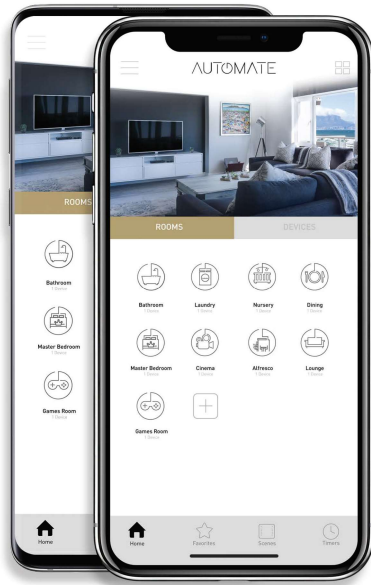

Voice Control



Home Automation Integration



Sunrise & Sunset Detection



Live Feedback

ROOMS

Group Automate shades by room and conveniently control them accordingly.



SCENES

Personalise shade control and organise how your shades operate by specific daily events.




TIMERS

Set and forget. Lower, raise and activate shade scenes automatically at the optimal time.



MULTIPLE SHADE TYPES

Awnings, Roller shades, External shades, Cellular ...Control every shade type from one screen.

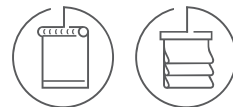

AUTOMATE™

A DIVISION OF ROLLEASE ACMEDA

+1 203-590-5318

ustechsupport@rolleaseacmeda.com



automateshades.com