


PROGRAMMING INFORMATION FOR E-SERIES


PLEASE KEEP IN MIND THAT OUR E-SERIES PRODUCTS COME PREPROGRAMMED FROM THE FACTORY SPECIFICALLY FOR YOUR WINDOW HEIGHTS AND TO YOUR MOTOR. THIS INFORMATION SHOULD ONLY BE USED IF THE PROGRAMMING HAS BEEN ACCIDENTALLY ERASED OR AT THE ADVICE OF THE MANUFACTURER. PLEASE UNDERSTAND THAT TECHNICAL SUPPORT IS AT THE DISCRETION OF THE MANUFACTURER IN CASES OF UNAUTHORIZED SYSTEM RESETS.

Pairing A Wireless Remote (only if your motor was ordered with the wireless upgrade)

To pair a wireless remote, press and hold the reset button using a paperclip on the back of the wand for approximately 3 seconds looking for the shade to jog once and beep once.

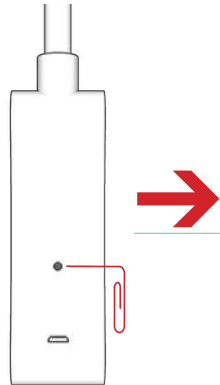


Immediately after the jog and beep press the **up button once** on your wireless remote and the shade will jog once and beep 3 times confirming pairing success. If using a multi-channel remote make sure to have the desired channel selected prior to starting the process.

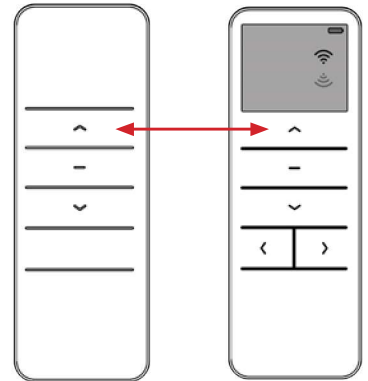

Setting/Adjusting Lift Heights

If the shade has been reset the lift heights have been reset as well. Use the process below to set new lift heights. If an adjustment needs to be made to existing lift heights the process below is the same except you will need to enter "Adjustment Mode". To enter adjustment mode for the top height press and hold the Up and Stop buttons together for 10 seconds looking for a single jog. To enter the adjustment mode for the bottom height press and hold the Down and Stop buttons together for 10 seconds looking for a single jog.

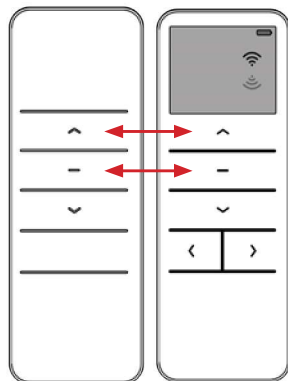

Top Height

Bring the shade to the position at the top nearest to the headrail that you would like to be the top height. You may have to stop the shade manually with the stop button. Press and hold the Up and Stop buttons together for about 3 seconds looking for shade to jog twice and beep once confirming the top height being set. This process can also be performed on the control wand.

Bottom Height

Bring the shade to the position at the bottom nearest to the window sill that you would like to be the bottom height. You may have to stop the shade manually with the stop button. Press and hold the Bottom and Stop buttons together for about 3 seconds looking for shade to jog twice and beep once confirming the bottom height being set. This process can also be performed on the control wand.

