

## Motorized Blind and Shade Programming Instructions – U.S. Instructions

NOTICE: ALL SHADES COME PRE-PROGRAMMED FROM THE FACTORY. THIS GUIDE SERVES AS A TROUBLESHOOTING AID. IF THE CONSUMER RESETS THE PROGRAMMING, TECHNICAL SUPPORT WILL BE AT THE DISCRETION OF THE MANUFACTURER.

### **Pairing Wireless Remote**

To set pair a wireless remote press and hold either the reset button on the wand or the motor for just over two seconds looking for the shade to jog once and beep once.

- On the single channel remote press the up button once and the shade will jog once and beep 3 times confirming pairing success.
- On the multi-channel remote use the left and right buttons to select the appropriate channel prior to using the reset buttons. (Channel 0 should be used to operate multiple shades simultaneously.) After using the reset buttons press the up button and the shade will jog once and beep 3 times confirming pairing success.

### **Setting Lift Heights**

(This section is for setting the lift heights after the shade has undergone a full system reset. For instructions adjusting an already set lift height see the next section.)

*For Top:*

- Press and hold the up button for two seconds and the shade will begin to rise. A single push of the button in this mode will only jog the shade up a few inches. When the shade reaches your desired top height press the middle stop button. Press and hold the stop and up buttons at the same time looking for the shade to jog twice and beep once confirming the top height being set.

*For Bottom:*

- Press and hold the down button for two seconds and the shade will begin to lower. A single push of the button in this mode will only jog the shade down a few inches. When the shade reaches your desired bottom height press the middle stop button. Press and hold the stop and down buttons at the same time looking for the shade to jog twice and beep once confirming the bottom height being set.

## Adjusting Lift Heights

(This section is to adjust lift heights of an already programmed shade.)

*For Up:*

- Press and hold the stop and up buttons for 10 seconds looking for a single jog. The shade is now temporarily in adjustment mode and single pushes of the up or down will raise and lower the shade in small increments. Press and hold the up button for two seconds and the shade will begin to raise. Press the stop button at the desired height. Press and hold the stop and up buttons for two seconds looking for two jogs and one beep. The new top height is set.

*For Bottom:*

- Press and hold the stop and down buttons for 10 seconds looking for a single jog. The shade is now temporarily in adjustment mode and single pushes of the up or down will raise and lower the shade in small increments. Press and hold the down button for two seconds and the shade will begin to raise. Press the stop button at the desired height. Press and hold the stop and down buttons for two seconds looking for two jogs and one beep. The new bottom height is set.

(If heights are not set within one minute of initialization the system will timeout and the motor will default back to the last used top and bottom heights)

## Switching Between Jog and Full Motion Modes

Jog Mode allows for the shade to lower or raise in small increments with a single push of the appropriate button. A three second push in Jog Mode will raise or lower completely. Full Motion Mode will raise or lower the shade completely with a single button push.

To change between modes press and hold the up and down buttons on either the wand or remote for 3 seconds waiting for one jog and three beeps confirming the change.

## Changing Lift Directions

Press and hold the wand reset button for 6 seconds waiting for two separate single jogs. Release immediately after the second jog listening for two beeps. The lifting directions have now been reversed. Sheer opening is not available in this configuration. Shade can open and close but cannot tilt.

## Unpair Wireless Remotes

To unpair a wireless remote press and hold the reset button on the motor for 10 seconds looking for two sperate individual jogs. Immediately release after second jog listening for two beeps. All wireless remotes are now unpaired.

## Full System Reset

(This section is for completely resetting the shade. This should only be done as a last resort when all other solutions have failed.)

To fully reset all settings on the shade press and hold the reset button on either the motor or wand for 15 seconds looking for three separate sets of jogs followed by three beeps. All settings have now been reset on the shade. Follow the following steps below with the instructions above to re-initialize your shades.

### Initializing Your Shade:

1. Reverse Shade Direction (Only if reset occurred on the motor. If the reset occurred on the wand disregard)
2. Pair Remote (If applicable)
3. Set Top Height
4. Set Bottom Height
5. Switch from Jog Mode to Full Motion Mode if desired
6. Enjoy Your Shade