


Simple Touch® Top Down Bottom Up and Day/Night Cell Shade - 15-Channel Remote User Guide



This Simple Touch® motorized shade is already connected to remote and programmed with Upper and Lower Limits. Option to program "My Favorite Position" followed with the instruction below. Enjoy your new motorized shade!

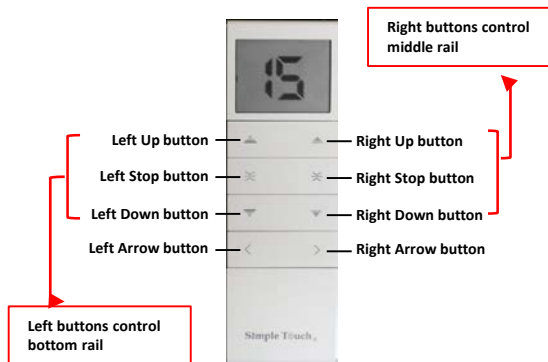

Features and Operation

FEATURES

- This Simple Touch® 15-channel remote works with Top Down Bottom Up Cellular Shade and Day/ Night Cellular Shade.
- Each channel can only control **ONE** motorized shade.
- Channel "0" is designed to control multiple shades. The maximum controlled quantity is 15 shades.
- **Right Up** (▲), **Right Stop** (⊞), and **Right Down** (▼) buttons control middle rail. **Left Up** (▲), **Left Stop** (⊞), and **Left Down** (▼) buttons control bottom rail. Refer image above for more info.

OPERATION

- Click **Left Arrow** (◀) and **Right Arrow** (▶) buttons to switch within channels.
- Click **Up** (▲) or **Down** (▼) buttons to control rails go up or go down.
- Click **Stop** (⊞) buttons to stop the moving of the shade.
- After set up Upper and Lower limits, press either **Up** (▲) or **Down** (▼) buttons for 2 seconds to control both middle and bottom rails at the same time. Click any **Stop** (⊞) button to stop moving.
- Go to Channel "0" to control all the motorized shades connected to this remote.
- After set up "My Favorite Position", press **Right Stop** (⊞) or **Left Stop** (⊞) button for 3 seconds to control both middle rail and bottom rail to my favorite position.



Programming Instruction

PROGRAMMING FOR MY FAVORITE POSITION (optional setup)

Set Up Bottom rail to My Favorite Position	Step 1. Click Right Arrow or Left Arrow buttons to select the channel. If you only have shade, please stay with channel "1".
	Step 2. Control bottom rail to the favorite position by pressing Left Up or Left Down buttons.
	Step 3. Click Right P2 button, and then shade jogs once.
	Step 4. Click Left Stop button, and then shade jogs once.
	Step 5. Click Left Stop button again, and then shade jogs twice.
Set Up Middle rail to My Favorite Position	Step 1. Control middle rail to the favorite position by pressing Right Up or Right Down buttons.
	Step 2. Click Left P2 button, and then shade jogs once.
	Step 3. Click Right Stop button, and then shade jogs once.
	Step 4. Click Right Stop button again, and then shade jogs twice.



Simple Touch® Top Down Bottom Up and Day/Night Cell Shade - 15-Channel Remote User Guide

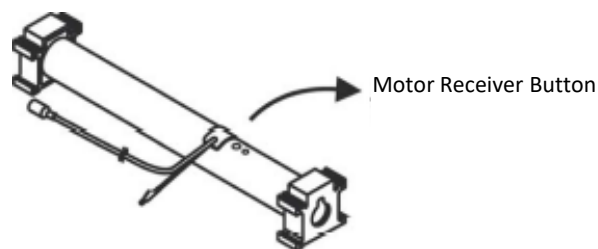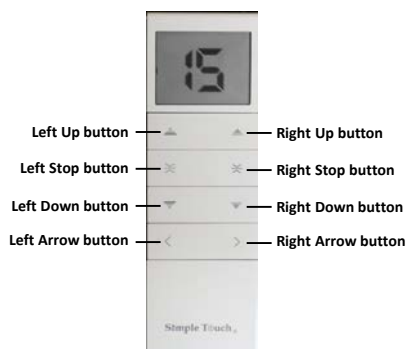

TO REPROGRAM THIS MOTORIZED SHADE, PLEASE FOLLOW THE STEPS BELOW.

Restore factory setting	Step 1. Press the Motor Receiver button and don't release until shade jogs 4 times. This step takes about 15-20 seconds.
	Continue to follow the instruction below to set up Frequency Connection , Upper Limit and Lower Limit .
Frequency Connection	Step 1. Select the channel on the remote with clicking the Left Arrow and/ or Right Arrow buttons.
	Step 2. Press Motor Receiver button for 2 seconds, motor jogs once, and then release Motor Receiver button.
	Step 3. Press Left Stop button on remote for 2-3 seconds, motor jogs twice.
Set Upper Limit	Step 1. Press Right Up button and Left Up button to control both middle and bottom rails going up. Click Stop button when rails hit the headrail.
	Step 2. Press Left Up & Left Stop buttons at the same time for 2-3 seconds, motor jogs twice.
Set Lower Limit	Step 1. Press Left Down button to control bottom rail moving down until it reaches the ordered drop height. Click Left Stop button to stop moving.
	Step 2. Press Right Down button to control middle rail moving down until it hits bottom rail. Click Right Stop button to stop moving.
	Step 3. Press Right Down & Right Stop buttons at the same time for 2-3 seconds, motor jogs twice.
	Step 4. Programming is done.
Program "My Favorite Position" followed with the instruction on page 1 as an option.	