Simple Touch® 15-Channel Remote Programing Instruction

Step 1. 15-Channel Remote Frequency Connection

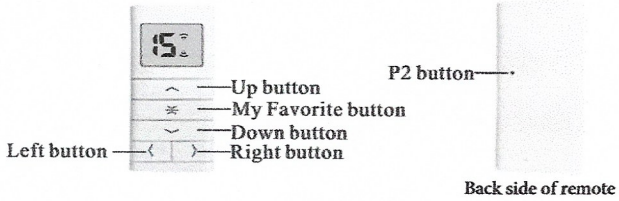

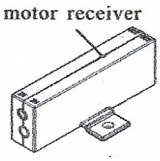

→ Use **Left** or **Right** button to select channel from 1 to 15.
→ Press **motor receiver** with pin or paper clip for 2 seconds. Wait for motor to "jog".
→ Click **P2** button (on back of remote) with pin or paper clip, and then wait for motor to "jog".
→ Click **P2** again and wait for another "jog".
→ Click **Up** button.
→ RF connection completed.

Setp 2. Setup Top Limit

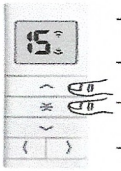

→ Press **Up** button to move shade to top limited location.
→ Press **Up** and **My Favorite** buttons at the same time for 5 seconds.
→ You will hear 3 short "B". (B - - -)
→ Top limit setup completed.

Setp 3. Setup Bottom Limit

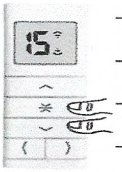

→Press **Down** button to move shade to bottom limited location.
→Press **Down** and **My Favorite** buttons at the same time for 5 seconds.
→You will hear 3 short "B". (B - - -)
→Bottom limit setup completed.

Step 4. Setup My Favorite Position

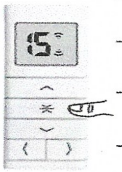

→ Operate the shade to your favorite position.
→ Press **My Favorite** button for 5 seconds. Wait for a short "B". (B -)
→ Then press **My Favorite** button again for 3 seconds. Wait for 3 short "B". (B - - -)
→ My Favorite position setup completed.

* Hide unused channels on remote

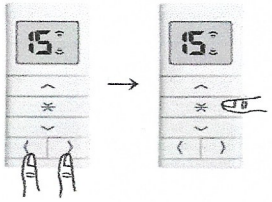

→Press and hold **Left** and **Right** buttons at the same time, and then "C" will show on the screen. Wait until "15" shown on the screen, then release buttons.
→Press **Left** or **Right** button to select how many channels you want to show on the screen. For
→example, if you only have 10 motorized shades connected to this remote, please select "10".
Press and hold **My Favorite** button (a small "0" will appear first) until channel number shown on
→the screen again.
→ Setting completed.

* Unhide channels on remote

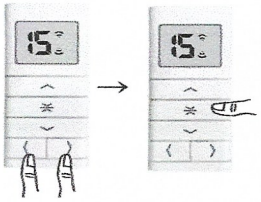

→Press and hold **Left** and **Right** buttons at the same time, and then "C" will show on the screen. Wait until "15"shown on the screen, then release buttons.
→Press **My Favorite** button (a small "0" will appear on screen).
→Setting completed.

* Reset/ Re-programing



→ Press **Up**, **My Favorite**, and **Down** buttons at the same time. Don't release until you hear a long "B". (B ~)
→ Start programing from Step 1 to Step 4 above.