

## ONE YEAR LIMITED WARRANTY:

### What is covered by this warranty and for how long:

For a period of one (1) year from the date of purchase, all products are warranted against defects in materials and workmanship provided that the product is installed according to the product instructions. We reserve the right to determine if your piece warrants a repair or partial replacement of any parts or in the unlikely event the entire piece is defective, we will replace this window covering with a new window covering of equal or superior value. This shall be your sole remedy under this warranty.

### Who is covered by this warranty:

This warranty applies to the original customer with proof of purchase in a residential application within the United States.

### What is not covered in this warranty:

This warranty does not cover removal or installation or reinstallation of any window covering. This warranty does not cover damage or defects caused by or resulting from improper maintenance, neglect or improper use, abuse, misuse, neglect, accidents, Acts of God, alteration, commercial use, installation, removal or reinstallation or exposure to excessive moisture.

### Your rights under State Law:

This warranty gives you the specific legal rights. You may also have other rights which may vary from state to state. We will not be liable for **INCIDENTAL OR CONSEQUENTIAL DAMAGES** or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES, OR WARRANTIES.**

# Folding Door Installation Instructions

Thank you for purchasing your custom folding door panels. With proper installation, your panel should look beautiful and provide years of service. Please read these instructions before starting installation.

## TOOLS THAT MAY BE REQUIRED:


Pencil, Tape Measure, Screw Driver, Step Stool, Level, and Drill.

## INSTALLATION:


**NOTE: For wallboard or plaster, use anchors designed for hollow walls (not included). For concrete, stone and brick, use a masonry drill bit and anchors designed for masonry (not included).**

### OUTSIDE / WALL MOUNT WITHOUT VALANCE

1. Determine height to position brackets. Once installed the shade should be  $\frac{1}{2}$ " to  $\frac{3}{4}$ " above the ground, so add this to the total ordered height of the shade. Make sure there is enough clearance from the wall, so that the door will move freely past any obstructions. The door needs  $2\frac{1}{2}$ " clearance from the window trim or any other obstruction.
2. Position one bracket about 1" – 2" in from each end of the track.  
**[figure 1]** Mark screw holes with a pencil and drill pilot holes.  
**[figure 2]** Use appropriate wall anchors. Position the other brackets equally across the width of the door. Make sure all brackets are straight and level.

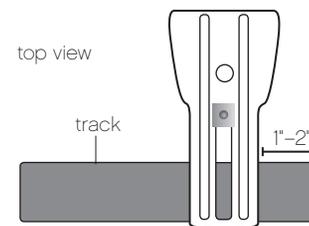


[figure 1]

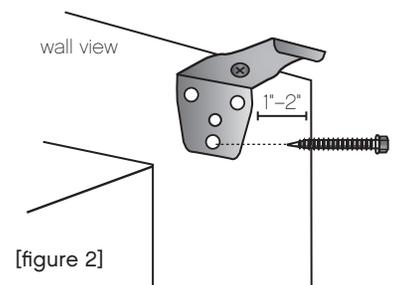


[figure 2]

3. Snap the track into the brackets. **[figure 3]**
4. Slide the hangers on top of the door into the track so that the door hangs from the track. Do not insert the hanger on the top of the bamboo edge bar that will be at the stationary side. **[figure 4]**

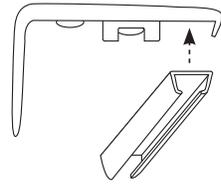


[figure 3]

5. Install one set screw about 1" from the end of the track where the stationary bamboo edge bar will be located. Insert the hanger on the bamboo edge bar and then install another set screw at the end of the track, so the bamboo edge bar is caught between the two set screws and cannot move. If installing a split draw door, the bamboo edge bar at each end will require two set screws to hold it in place. **[figure 5]**

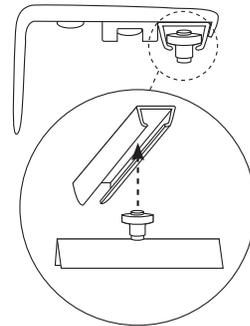

[figure 4]

6. Install a set screw at the end of the opposite side of the track. The door can now slide freely without falling out of the track and the stationary end will not move.

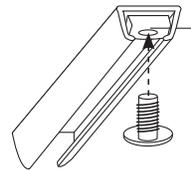


[figure 5]


7. Install handle if desired. **[figure 6]**

### OUTSIDE / WALL MOUNT WITH VALANCE

1. Install brackets as above.
2. Install the track as above.
3. Place the valance board on top of the brackets and secure to the brackets by screwing a 3/4" screw into the valance through the hole in the top of the bracket. **[figure 7]**
4. Insert the hangers on the door as above and secure the stationary bamboo edge bar with the set screws.

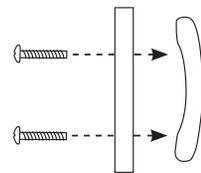


[figure 6]

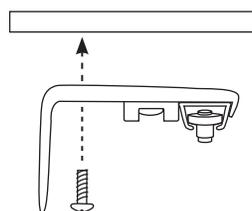

[figure 7]

### OUTSIDE / WALL MOUNT WITH VALANCE *continue*

5. Attach the valance to the front of the valance board.

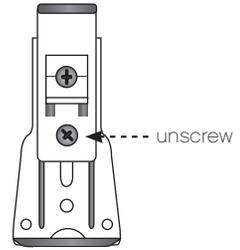

[figure 8]


### INSIDE / CEILING MOUNT WITHOUT VALANCE

1. For ceiling mount, the same bracket can be used by removing the adjustable plate from the wall bracket. To remove this plate, unscrew the silver screw holding the two parts of the bracket together. **[figure 8]**

Remove the screw and bolt. The flat plate can then be used as a ceiling bracket and installed to the mounting surface by screwing through the hole in the plate. **[figure 9]**

2. Locate the positions of the ceiling mount brackets and mark the screw holes. The track should be at least 2 1/2" in from the window or any obstruction that will stop the door moving freely.

Make sure the brackets are aligned and straight. Drill pilot holes and insert appropriate wall anchors. Install brackets.

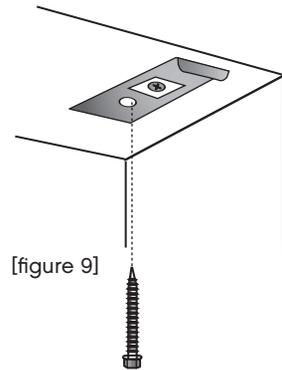

[figure 9]


3. Snap track into the brackets as shown in **figure 3**.

4. Install the door to the track as shown in **figure 4**.

### INSIDE / CEILING MOUNT WITH VALANCE

1. Install the valance board to the ceiling with screws and the appropriate anchors.

2. Mark the desired position of the ceiling mount brackets on the underside of the valance board. Install brackets as above and then install the door to the track. **[figure 10]**

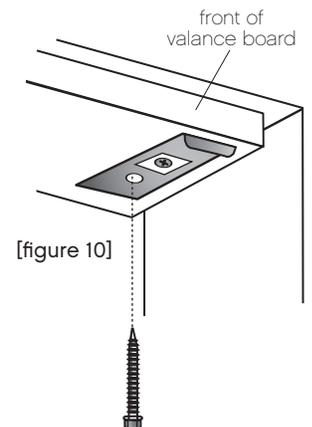

[figure 10]